


HEATED SEAT AUTO COVER USER'S GUIDE

Cover Installation

1. Make sure the seat cover's connector is facing towards the center of the car
2. Open the upper elastic portion of the car seat cover and slide it over the top half of your car seat. Stretch the bottom half of the seat covers over the lower seat cushion.
3. Secure seat cover via elastic (if applicable)

Connecting the Cords

1. Connect the power cord into the seat cover's socket.
2. Screw the fastener tight to lock the connections securely in place.
3. Now plug the 12V plug into the 12V cigarette lighter in your car. Make sure to insert the plug all the way into the cigarette lighter socket in your vehicle.

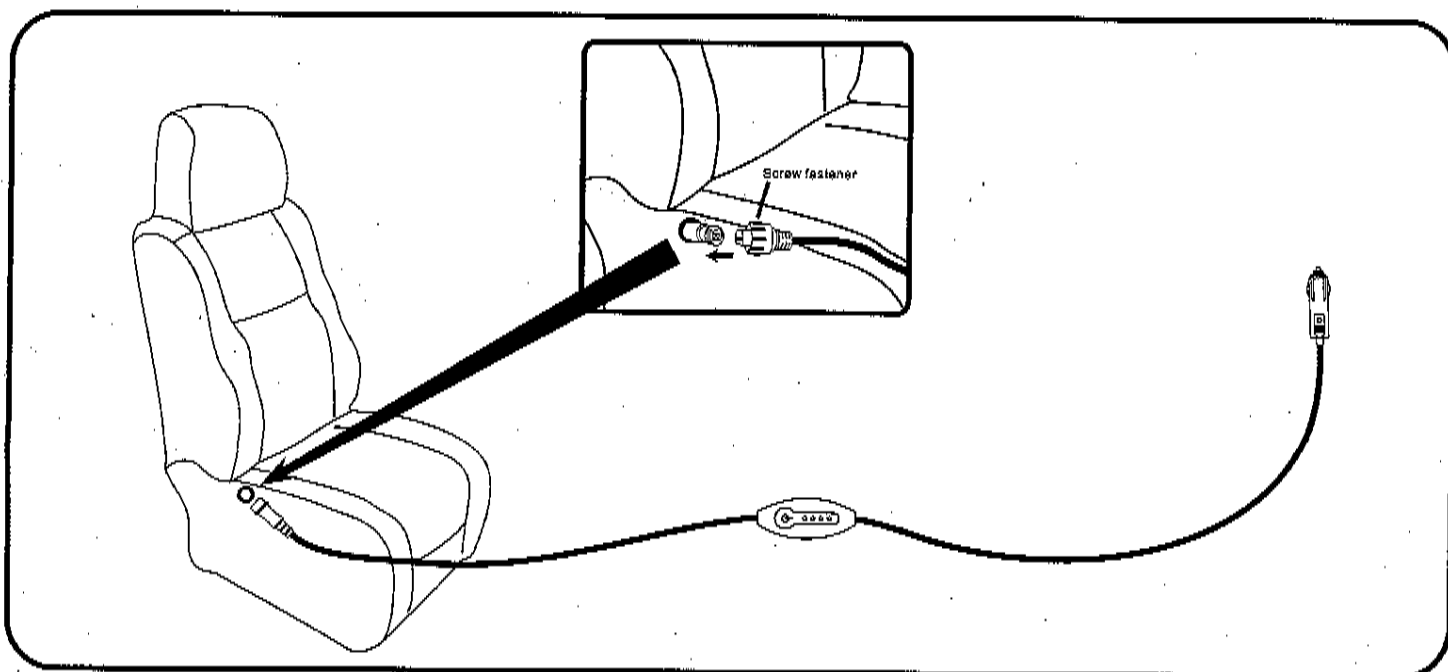

Using the Seat Cover

1. Power on: Press and hold the power button "⊙" for two seconds until the LED light shows blue (Max)
2. Power off: Press and hold the power button "⊙" for two seconds until all lights are off
3. Press the power button to change temperature settings (Max: Blue, High: Red, Med: Orange, Low: Green)
4. The seat cover will automatically shut off after completing 30 minutes of operation. This prevents the battery drain on your vehicle. You may press & hold the button to restart.

Caution

1. Do not power on the heated seat cover when folded. Install the seat cover onto the seat prior to power connection.
 2. Do not use with older vehicle with a poor electrical system.
 3. Do not use pins or pinch or trap the wires on seat cover.
 4. Improper use & care including water damage or tampering with electronics voids the warranty
 5. Stop use immediately if you notice abnormal functioning
- Designed for adult use only. Do not use on infants, helpless people or those sensitive to heat.

WASH & CARE

1. Unplug all wires prior to cleaning.
2. Spot cleaning with mild detergent is recommended.
3. Hand wash in cold water and hang dry. Do not wring.